

General Safety Instructions – Flexotrap

- Flexotrap is a modular and adaptable environmental bullet trap for indoor and outdoor use.
- Allowed shooting angles, distances, and ammunition types depend on equipment choice.
- See safety instructions for each module type.

General Requirements

- Applicable range safety standards must be followed according to the relevant jurisdiction and facility guidelines.
- The trap must be approved by a certified inspector and used according to permits, including Flexotrap's written approval.
- Use of safety glasses and full protective gear is mandatory.
- Any use risking personnel or property is prohibited.
- Manufacturer/distributor disclaims liability for improper use.
- Only original spare parts from Flexotrap allowed.
- Service, maintenance, and decontamination must comply with applicable legislation and local occupational safety standards.

Installation Before First Use

- Must be professionally installed on a flat, firm surface and anchored to prevent tipping.
- Customer is responsible for obtaining all necessary local permits.
- For indoor installation: ventilation outlets must be mounted in each module. Negative pressure is required during use. Indoor air quality must meet regulations.

Please visit www.flexotrap.se for correct documentation and latest update

Contact: info@flexotrap.se