

Inspection During Use – Flexotrap

Pre-use Check

- Ensure post-use inspection was properly done.
- Verify the surrounding area is empty and access to the danger zone is blocked.
- Visually inspect each module including grid, backplate, and shields: no changes, no damage, all parts in place.
- Check the logbook for any notes about damage. Register new session.

During Use

- Inspect modules every 1000 shots maximum.
- If indoors: verify proper ventilation.
- Monitor for any changes or damage.

Post-use Check

- Ensure rubber curtain is intact with no rebound risk.
- Lift curtain and inspect grids for wear, grooves, bending, etc. Rotate if needed.
- Inspect wear plates and backplate for damage or deformation.
- Ensure no materials are hot (fire risk).
- Empty bullet fragment tray and area nearby with approved vacuum cleaner.
- General check:
 - Bolts intact
 - No cracks in welds or materials
 - No part deformation
 - No faults affecting functionality
 - Rebound protection intact
 - Blinding panels properly attached
 - Modules properly fixed to walls
 - Fill in shooting log

Any fault or damage results in shooting ban. Only replacement parts from Flexotrap are allowed and exchanged parts must be returned to Flexotrap.

Please visit www.flexotrap.se for correct documentation and latest update

Contact: info@flexotrap.se