

Instructions for Use – Flexotrap

Shooting Supervisor

- A shooting supervisor must be appointed before each use. If not appointed, the shooter is considered the supervisor.
- The supervisor must be familiar with the product and usage/maintenance conditions.
- If the supervisor lacks sufficient knowledge, the range must not be used.
- Before, during, and after each shooting session, the supervisor must inspect the bullet trap for damage or risk.
- All shooting is at your own risk.

Permitted Weapons and Ammunition

- Only hunting-approved ammunition with a max bullet diameter of 20 mm is allowed (no armor-piercing or similar).
- Max impact energy in trap: 1000/4500/6500/18000 Joules.
See the specific value for your product in the product datasheet.
- Max impact velocity in trap: 930 m/s

Use

- Always follow the applicable rules and safety procedures established for the specific shooting facility.
- Pre-, during-, and post-use inspection as per document "Flexotrap, Usage Inspection".
- Shooting log must be filled out for each use.
- Any damage results in a prohibition on use; contact the manufacturer.
- Shooting only from designated positions.
- Wear full-coverage clothing and appropriate protective gear.
- Minimum shooting distance: 5 meters
- Maximum lateral impact angle: 15/67°
See the specific value for your product in the product datasheet
- Maximum vertical impact angle: 12/15/22°
See the specific value for your product in the product datasheet
- Shoot only within the marked area on the rubber curtain.
- No personnel allowed in or behind the risk zone during firing.
- Targets must be positioned so ricochets stay within the red-marked impact zone.
- When handling bullet fragments or performing maintenance, full protective gear must be used in accordance with applicable safety practices.

Please visit www.flexotrap.se for correct documentation and latest update.

Contact: info@flexotrap.se